

# User Manual



Thank you for purchasing a product from the EuroCave brand. We take great care in designing products that are ergonomic and user-friendly.

We hope that you will be completely satisfied with this product.

## WARNINGS

The information in this document may change without notice.

EuroCave does not guarantee this appliance when it is used for purposes other than those for which it was designed.

EuroCave shall not be held responsible for any mistakes in this manual or for any damage connected to or resulting from the supply, performance or use of this appliance.

This document contains original information protected by copyright. All rights are reserved. Photocopying, reproducing, fully or partially translating this document are strictly forbidden without EuroCave's prior written consent.

This appliance is only designed to store wine.

This appliance is not designed to be used by people (including children) with reduced mental, sensory or physical abilities or by people lacking experience or knowledge, unless they are supervised or have been given instructions on how to use the appliance by someone responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the power lead is damaged, it must be replaced by a lead or special unit available from the manufacturer or customer services.

### WARNING:

- Ensure that the air vents inside the appliance's cavity remain unobstructed at all times.
- Do not use mechanical devices or other means to speed up the defrosting process other than those recommended by the manufacturer.
- Do not damage the cooling circuit.
- Do not use electrical appliances inside the wine storage compartment unless these have been recommended by the manufacturer.
- Do not store in this appliance explosive substances such as aerosols containing flammable propellant gas.

This appliance is intended for use in domestic and similar applications such as:

- kitchenettes for staff of shops, offices and other work environments,
- gites and use by guests of hotels, motels and other environments residential in nature,
- environments such as hotel rooms,
- the food service industry and other similar applications except for retail sale.

You will find a product identification label inside the wine cabinet. This product identification label provides several pieces of technical information as well as safety instructions, notably the triangle logo, the name and chemical symbol of the refrigerant.

- The cabinet contains flammable refrigerant gas (R600a: isobutane).

Conditions to ensure gas safety and safety when using the wine cabinet:

- The cooling system at the back of and inside the cabinet contains refrigerant.
- No sharp objects must come into contact with the cold circuit.
- Do not use electrical appliances inside the wine cabinet.
- Do not obstruct the openings.
- If the cold circuit is damaged, do not bring electrical appliances or flames near to the wine cabinet. Open all of the windows to ensure that your room is well ventilated. Contact an approved repair service.
- Using an extension cord is not recommended.

Danger: risk of children climbing inside a faulty cabinet.

Before disposing of your wine cabinet:

- Remove the door.
- Leave the shelves inside the wine cabinet. In this way, children will find it difficult to get inside.

The warnings given above must be retained throughout the lifetime of the cabinet. The operating instructions must be given to anybody likely to use or handle the cabinet and when the cabinet is transferred to a different place or delivered to a recycling plant.

Our greatest wish is to find the best solutions for your wine storage needs...To do so, EuroCave has drawn on its considerable expertise to bring together the 6 criteria essential for storing wine:

Temperature

The two enemies of wine are extreme temperatures and sudden changes in temperature.A constant temperature allows wine to reach its full potential.

Humidity

It is a vital criterion, allowing the corks to retain their sealing qualities. Humidity levels must be above 50% (ideally 60 - 80%).

Protection from light

Light, in particular its ultraviolet component, very quickly causes wine to deteriorate by irreversible oxidation of tannins. In this way, it is strongly recommended that you store your wine in a dark place or protected from U.V. light.

Lack of vibration

Vibration disrupts wine’s long development process and is often fatal for fine wines. Acting as a casing, the “Main Du Sommelier” bottle supports adapt to the shape of and protect each bottle from vibration (anti-vibration technology).

Air circulation

Constantly renewed air prevents mould from forming in your cabinet. EuroCave cabinets benefit from a ventilation system by breather effect, making it very similar to a natural cellar.

Storage

Moving your bottles around too often is harmful to your wine. Having suitable storage to reduce handling is essential.

Thank you for placing your trust in EuroCave.

| Standard wine serving temperatures |       |  |                      |       |  |
|------------------------------------|-------|--|----------------------|-------|--|
| French wine                        |       |  | Australian wine      |       |  |
| Alsace                             | 10 °C |  | Cabernet franc       | 16 °C |  |
| Beaujolais                         | 13 °C |  | Cabernet sauvignon   | 17 °C |  |
| Sweet white Bordeaux wines         | 6 °C  |  | Chardonnay           | 10 °C |  |
| Dry white Bordeaux wines           | 8 °C  |  | Merlot               | 17 °C |  |
| Bordeaux reds                      | 17 °C |  | Muscat à petit grain | 6 °C  |  |
| White Burgundy wines               | 11 °C |  | Pinot noir           | 15 °C |  |
| Burgundy reds                      | 18 °C |  | Sauvignon blanc      | 8 °C  |  |
| Champagne                          | 6 °C  |  | Semillon             | 8 °C  |  |
| Jura                               | 10 °C |  | Shiraz               | 18 °C |  |
| Languedoc-Roussillon               | 13 °C |  | Verdhelo             | 7 °C  |  |
| Provence Rosé                      | 12 °C |  |                      |       |  |
| Savoie                             | 9 °C  |  |                      |       |  |
| Dry white Loire wines              | 10 °C |  |                      |       |  |
| Sweet white Loire wines            | 7 °C  |  |                      |       |  |
| Loire reds                         | 14 °C |  |                      |       |  |
| Rhône wines                        | 15 °C |  |                      |       |  |
| Sweet wines from the South-West    | 7 °C  |  |                      |       |  |
| Reds from the South-West           | 15 °C |  |                      |       |  |



|                                      |    |
|--------------------------------------|----|
| I - Description of your wine cabinet | 24 |
|--------------------------------------|----|



|                  |    |
|------------------|----|
| 2 - Power supply | 25 |
|------------------|----|



|  |    |
|--|----|
| 3 - Protecting the environment and saving energy | 25 |
|--|----|



|  |       |
|--|-------|
| 4 - Installing your wine cabinet                             | 25-28 |
| I – Installing the charcoal filter                           | 25    |
| II – Setting the feet and fitting the covers                 | 26    |
| III –Filling the “Hygrocontrol System” humidity control tray | 27    |
| IV – Different installations                                 | 28    |



|  |       |
|--|-------|
| 5 - Layout – Storage                         | 29-31 |
| I – Changing the position of a sliding shelf | 29    |
| II – Assembling and using shelf labels       | 31    |



|  |       |
|--|-------|
| 6 - Using your wine cabinet for the first time           | 31-34 |
| I – Connecting and starting up                           | 31    |
| II – Description   | 31    |
| III – Choice of temperature setting unit (°C / °F)       | 32    |
| IV –Setting the lighting mode                            | 32    |
| V – Setting the lighting intensity                       | 32    |
| VI – Charcoal filter                                     | 33    |
| A – Resetting the charcoal filter meter                  | 33    |
| B – Changing the charcoal filter                         | 33    |
| VII – Disabling the audible warning signal of the alarms | 34    |
| VIII – Placing the screen on standby                     | 34    |



|                          |    |
|--------------------------|----|
| 7 - Everyday maintenance | 35 |
|--------------------------|----|



|                      |       |
|----------------------|-------|
| 8 - Operating faults | 35-36 |
|----------------------|-------|




|  |    |
|--|----|
| 9 - Technical features and energy data | 36 |
|--|----|



|                          |     |
|--------------------------|-----|
| 10 - Storage simulations | 117 |
|--------------------------|-----|



## 1/ DESCRIPTION OF YOUR WINE CABINET

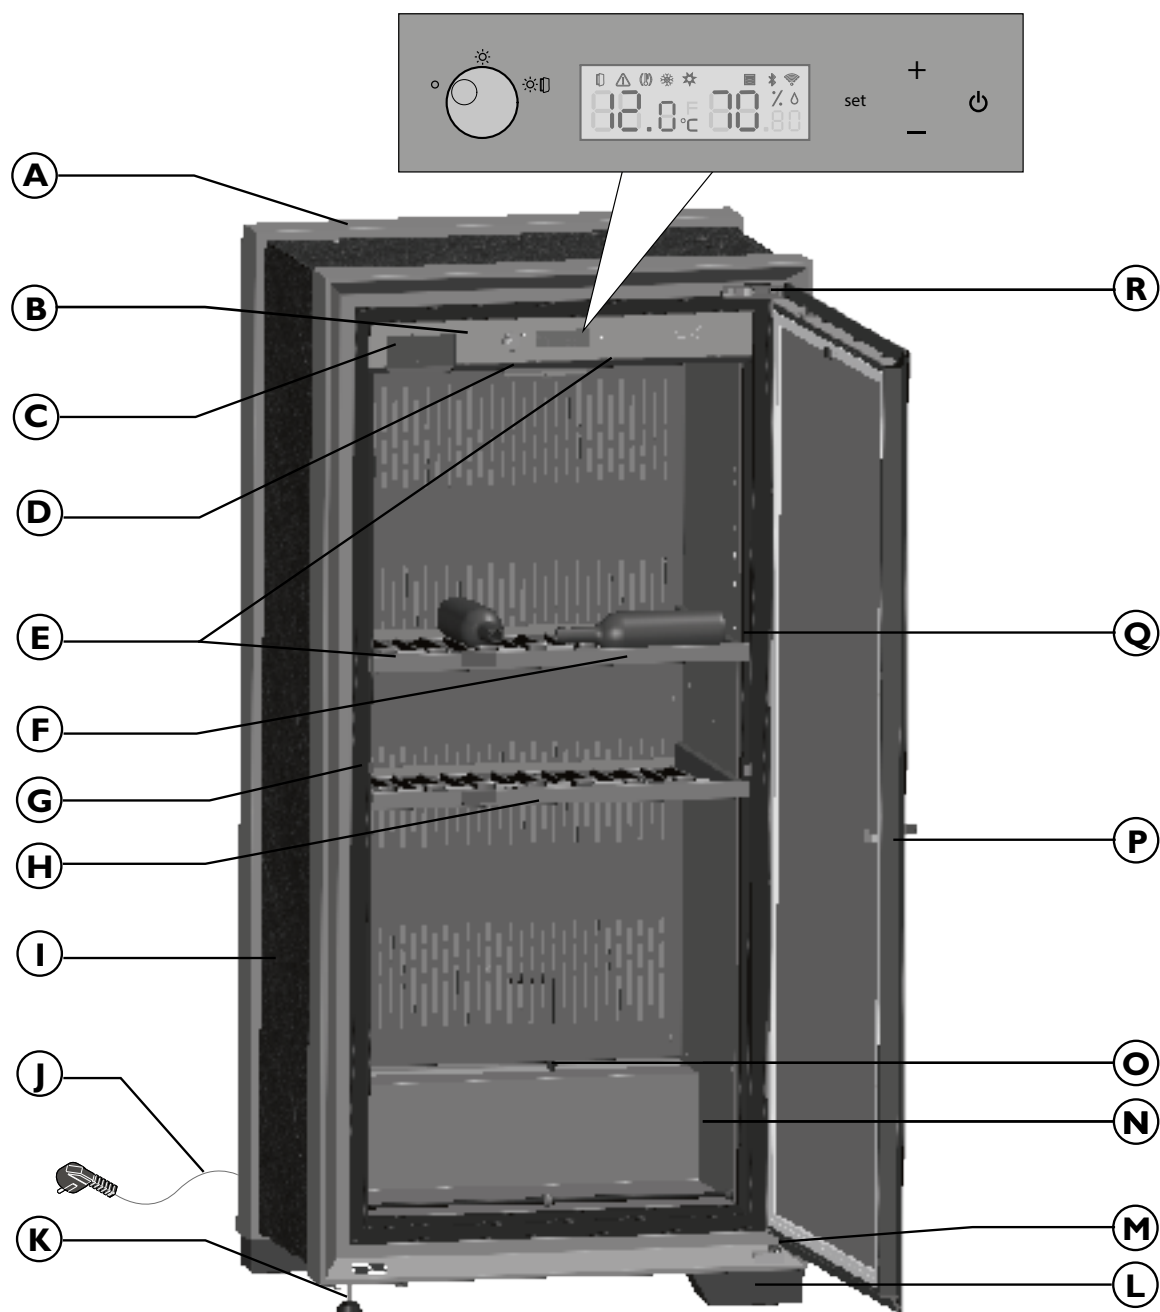

- |   |  |
|---|--|
| <b>A</b> Cabinet body   | <b>J</b> Powerlead (2 metres)                        |
| <b>B</b> Control panel  | <b>K</b> 4 adjustable feet                           |
| <b>C</b> Hygrocontrol System— humidity control tray                             | <b>L</b> 4 feet covers                               |
| <b>D</b> Charcoal filter  | <b>M</b> Lower hinge                                 |
| <b>E</b> Lighting – 4 LEDs under each shelf<br>+ 4 LEDs under the control panel | <b>N</b> Product identification label                |
| <b>F</b> Sliding shelf  | <b>O</b> Condensate collection tray with outlet hole |
| <b>G</b> Door catch   | <b>P</b> Door (built-in handle and dual action lock) |
| <b>H</b> Fixed shelf (stiffener) – do not remove                                | <b>Q</b> Electric switches for lighting the shelves  |
| <b>I</b> Decorative panel   | <b>R</b> Upper hinge                                 |



## 2/ POWER SUPPLY



**For your personal safety, the wine cabinet must be correctly earthed. Ensure that the socket is correctly earthed and that your installation is protected by a circuit breaker (30 mA\*).**  
\* not applicable to some countries.

The wine cabinet's power lead has a plug, to be plugged into a standard earthed outlet to prevent any risk of electric shock.



Have the power supply socket checked by a qualified electrician who will confirm whether or not it is earthed and will, if necessary, carry out work to make it compliant.

Contact your usual EuroCave retailer to replace the power lead if it is damaged. It must be replaced by a EuroCave manufacturer's part.



If you are moving to another country, check whether or not the characteristics of the cabinet correspond to the country (voltage, frequency).



## 3/ PROTECTING THE ENVIRONMENT AND SAVING ENERGY



### Disposing of packaging

The packaging used by EuroCave is made from recyclable material (except for the various foam wedges). After unpacking your cabinet, take the packaging to a refuse collection point. For the most part, it will be recycled.

### Recycling: a caring gesture

Electrical and electronic equipment is potentially harmful to the environment and human health owing to the presence of hazardous substances.

You should never therefore trash electrical and electronic equipment with unsorted municipal waste.

When you purchase a new EuroCave product, you can entrust recycling of your old appliance to your EuroCave retailer.

Speak to your EuroCave retailer; he will explain the removal and collection procedures set up in the EuroCave network.

In accordance with legislation on respecting and protecting the environment, your wine cabinet does not contain C.F.C.s or H.C.F.C.s

### To save energy

- Install your cabinet in a suitable location (see next page) and observe the temperature ranges provided.
- Keep the door open for as short a time as possible.
- Ensure that the door seal is in good condition and that it is not damaged. If it is, contact your EuroCave retailer.

Disable unusable appliances by unplugging them and removing the power lead.



## 4/ INSTALLING YOUR WINE CABINET

### Unpacking

- When your cabinet is delivered, check the outside of it for signs of damage (dents, buckling...).
- Open the door and check that the inside of your appliance is intact (walls, Main du Sommelier bottle supports, hinges...).
- Remove the protective elements placed inside and outside your cabinet.

- Prevent water splashing onto the entire back section of the appliance.
- Arrange the power lead so that it is accessible and does not come into contact with any of the appliance's components.
- Set the feet in order to level your cabinet (see chapter 4 § II).

**If there is a problem, contact your EuroCave retailer.**

### Precautions

- Do not place your cabinet in an area likely to flood.
- Do not place your cabinet close to a source of heat or anywhere it can come into contact with direct sunlight.



It is strongly recommended that you remove the bottles before moving the cabinet.





## 4/ INSTALLING YOUR WINE CABINET

### Installation

Move your cabinet to its desired location.

#### It must:


- be open to the outside to allow air circulation (not placed inside a cupboard...),
- not be too damp (linen room, laundry, bathroom...),
- have a flat, stable floor which can withstand 450 kg,
- have a power supply (standard outlet, 16 A, earthed with circuit breaker, 30 mA\* (\* not applicable to some countries).



**When moving your cabinet, never tilt it more than 45° and always on its side, on the opposite side of the power lead.**


- Move your cabinet to its intended location.
- Wait 48hrs before plugging it in.

- When used for the first time, the charcoal filter alarm will display. Reset the filter meter to 365 (see chapter 6, § VI).

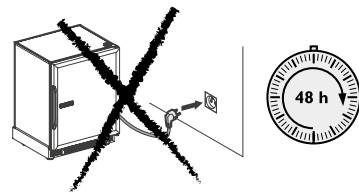


### Door security

In order to secure your cabinet, the Royale wine cabinet is fitted with a lock.

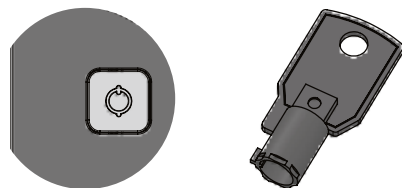


## I. Installing the charcoal filter


Install the charcoal filter (located in the “accessories” box) via the inside of the cabinet, placing it in the hatch located under the control panel.

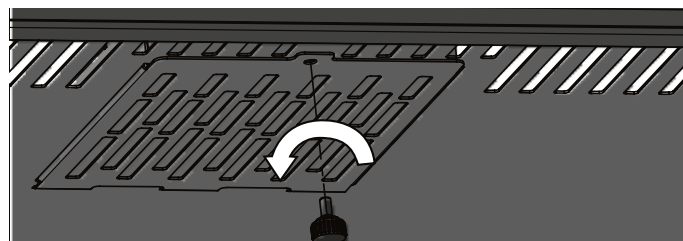


- 1 Unscrew the button of the charcoal filter hatch, under the control panel.

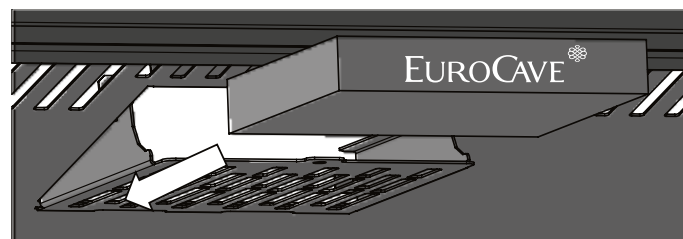

- 3 Insert the charcoal filter (EuroCave label facing you) located in the “accessories” box, taking care to first remove the protective plastic.

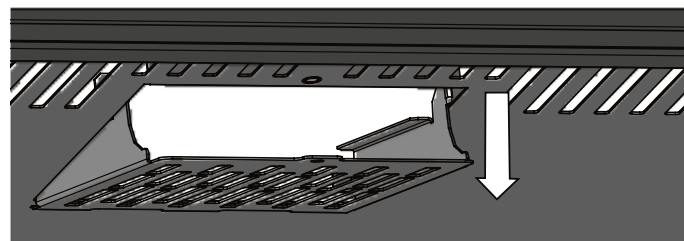

- 2 The hatch will open.

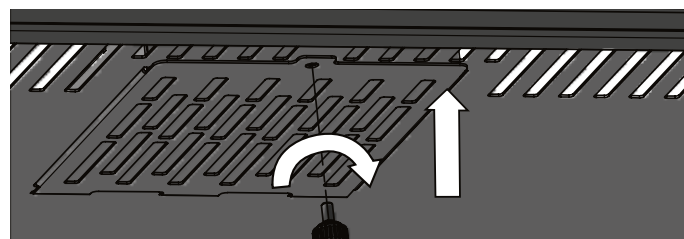

- 4 Push the hatch upwards and screw the button back on.



**N.B.:** Only use genuine EuroCave parts.

## II. Setting the feet and installing the covers


The distance between the centre of the cabinet feet is 515 x 748 mm.




**N.B.:** Setting the feet and fitting the covers must be carried out by a EuroCave installer.




## 4/ INSTALLING YOUR WINE CABINET

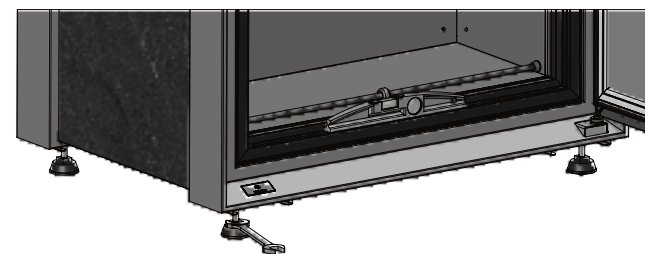

- 1 Using a 19 mm open-ended spanner and a spirit level, set the feet of your cabinet so that it is completely stable.

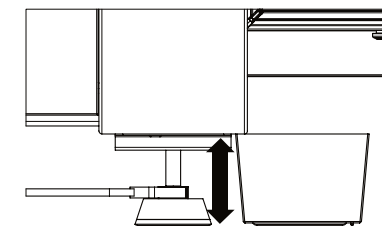

- 2 To help you, place the cover opposite the foot, so that there is no space between the cover and the floor.

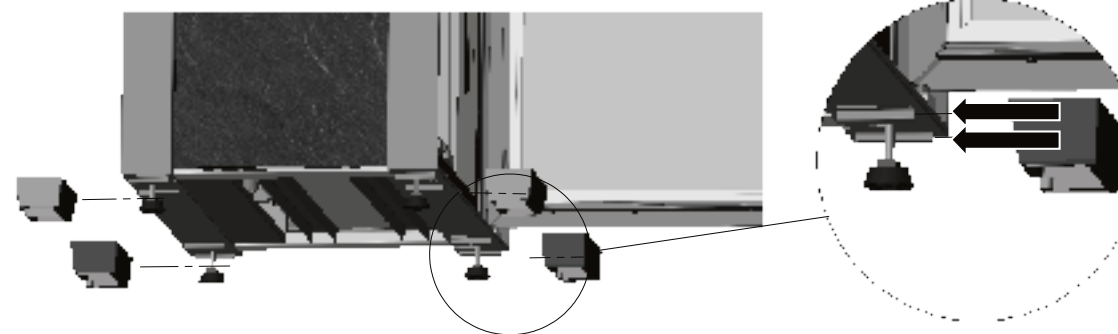


- 3 Fit the covers onto each foot, by sliding them into the runners provided.

## III. Filling the “Hygrocontrol System” humidity control tray

When using your wine cabinet for the first time, the humidity control tray – Hygrocontrol system – must be filled. This tray automatically humidifies the cabinet. It must be refilled every 6 months to a year, when the low humidity level alarm displays.




**N.B.:** Do not unscrew the tray's transparent panel to fill it. A hole is provided. Risk of tray overflowing if it is filled to the brim. Respect the maximum level.

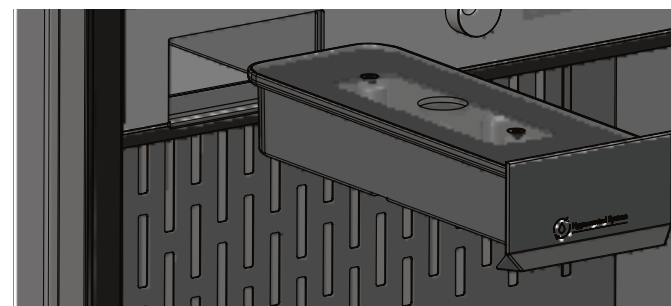


- 1 Remove the “Hygrocontrol System” humidity control tray from its slot.

Diagrams for illustration only

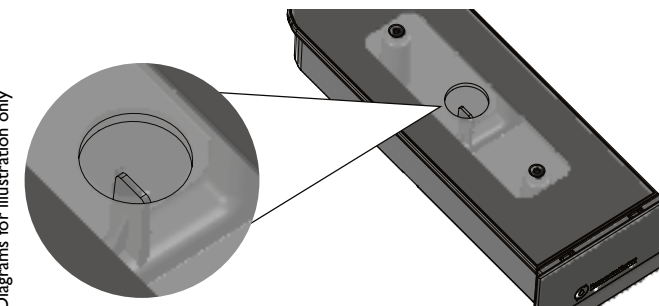

- 2 Fill the tray with water (preferably demineralized), by pouring it into the hole provided.

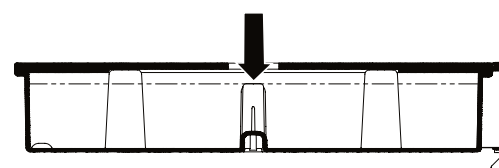

- 3 The tray must be filled until the water reaches the fill mark, located below the filling hole.



## 4/ INSTALLING YOUR WINE CABINET

### IV. Different installations


#### Installing two cabinets side by side

There is no reason why two cabinets cannot be installed side by side.



#### Installing the cabinet with the back to a wall

If you place your cabinet with its back to the wall, install the stop at the top, at the back of your cabinet. It is located in the accessories bag.

**T25 (not supplied)**

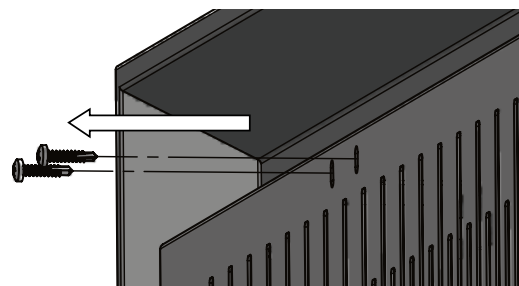

**1** Remove the screws located at the back of your cabinet, at the top, using a screwdriver.

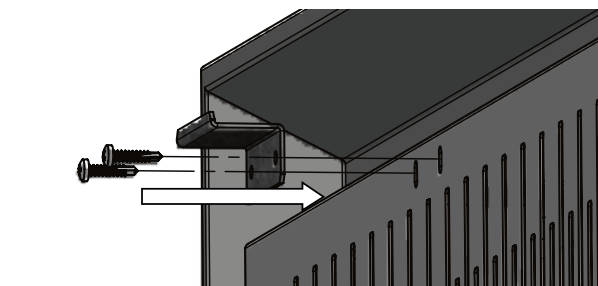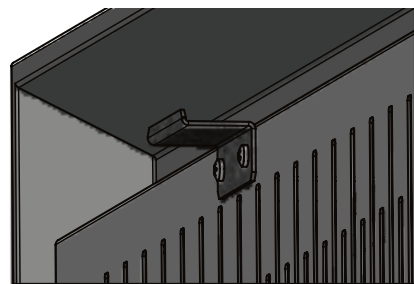


**2** Screw the rear stop using these two same screws.

#### Installing the cabinet in a corner




**N.B.:** If the cabinet is placed in a corner, the door hinge must be fitted so that it does not open more than 90°.


**T25 (not supplied)**

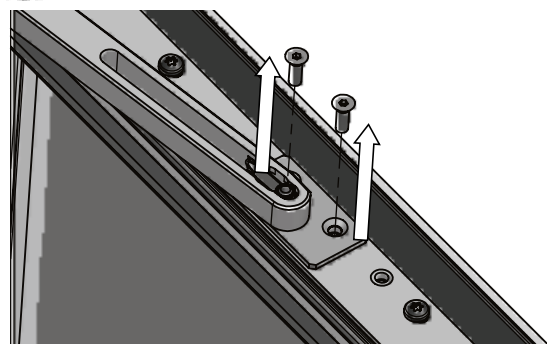


**1** Remove the screws fastening the hinge to the door using a T25 screwdriver.

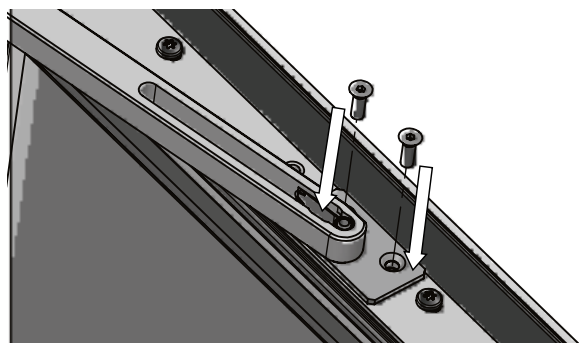

**3** Replace the screws on this new pivot fixing hole.

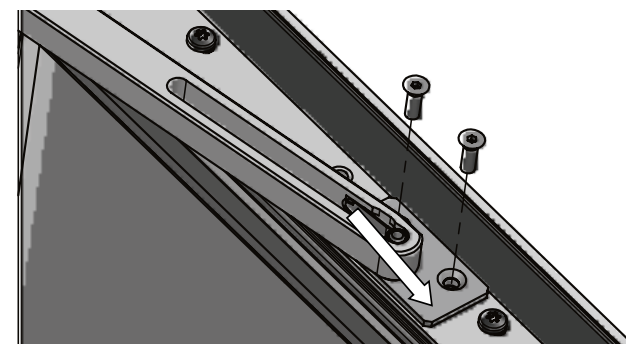

**2** Move forward the hinge attachment by one notch on the right.

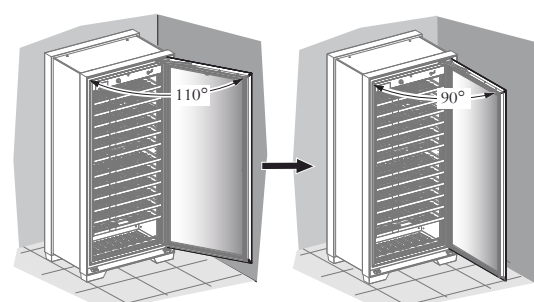


## 5/ LAYOUT – STORAGE




The number of Main du Sommelier supports on each shelf can be adjusted according to the type of bottles stored (Magnums, Champagne, Bordeaux...).

 
Universal sliding shelf fitted with “New Main du Sommelier” support  
Ref: ACMSR (Stained black ash front)



 **Capacity:** 9 traditional Bordeaux bottles



 **Capacity:** 9 bottles including 7 traditional Bordeaux bottles + 2 magnums



**Capacity:** 5 magnums

### Wine cabinet layout advice

Your EuroCave wine cabinet is designed to safely hold a maximum number of bottles. We recommend that you observe the following advice in order to optimise loading.

- Ensure that you distribute your bottles as uniformly as possible over the shelves of your cabinet, in order to distribute the weight over as large an area as possible.
- Also ensure that you distribute your bottles uniformly over the height

of the wine cabinet (avoid loading all the bottles at the top or all the bottles at the bottom).

- Observe the loading instructions according to the type of storage equipment your cabinet has, and never stack bottles on a sliding shelf.
- Fill the cabinet to more than 75% of its capacity to ensure a uniform temperature.

**When using your wine cabinet, never pull out more than one sliding shelf at a time.**




### I. Changing the position of a sliding shelf

The shelf in the centre of your cabinet is fixed. It is used as a stiffener and cannot be removed. The other shelves in the cabinet can be moved.


If your sliding shelf is already positioned in your cabinet:

- Completely unload the sliding shelf.
- Then remove the sliding shelf by sliding it towards you whilst lifting the front section.
- Remove the slide guides from the walls, marking off the right guide and the left guide.
- Then proceed to set up the sliding shelf (see diagrams below).



The latch of the soft close device cannot be latched (left runner). It is essential to latch it before positioning the sliding shelf on the runners. Ensure that the latch is positioned towards the front. If it is not, pull it forwards to latch it.

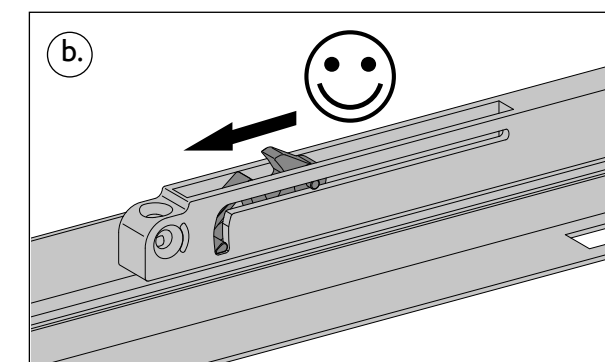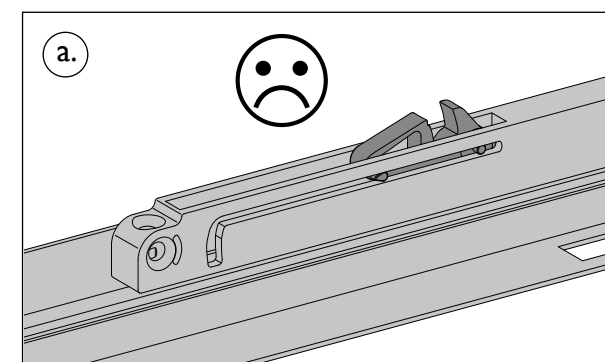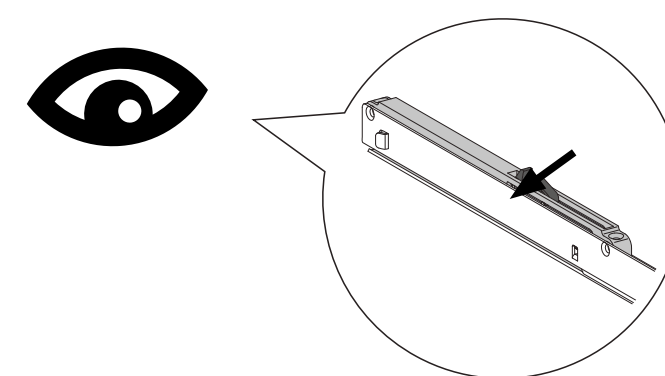


## 5/ LAYOUT – STORAGE

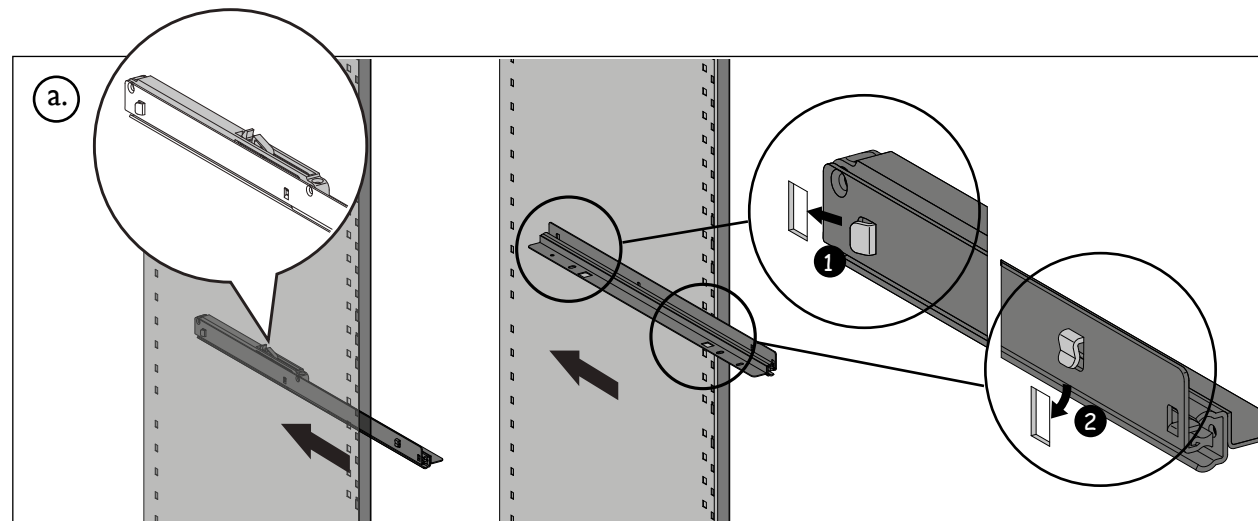


Diagrams for illustration only

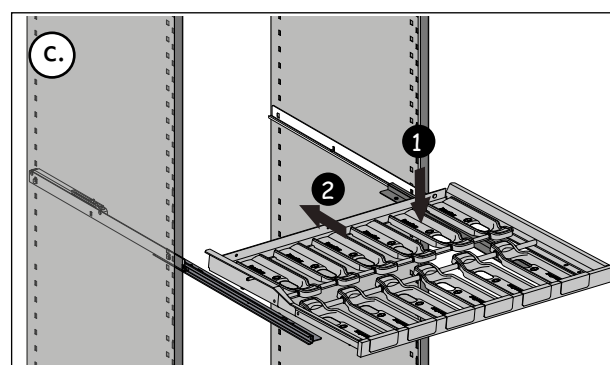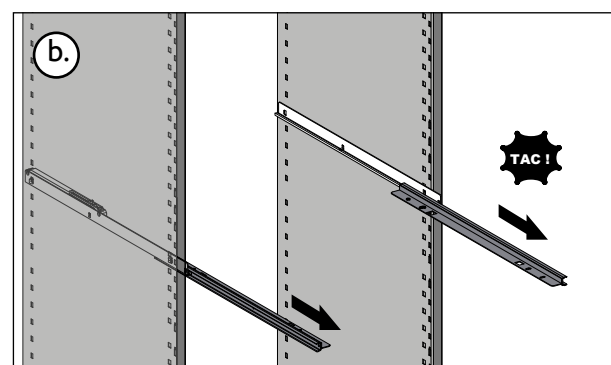



Position your shelf along the left and right runners and start by securing the rear section of the shelf.

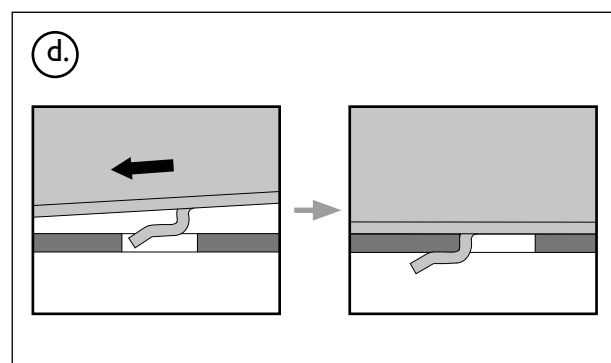

Slide the shelf until the rear hooks of the shelf are locked into the slots provided in the runners.

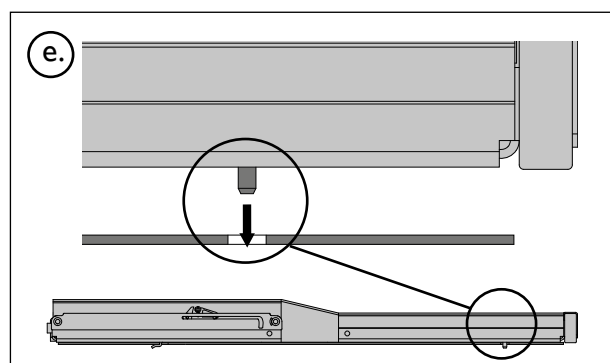

Then slot the front studs of the shelf into the slots provided in the front section of the runners. You must jiggle the shelf in order to slot the studs into the holes. Start by inserting the left stud. The right one will then slot naturally into the oblong hole.

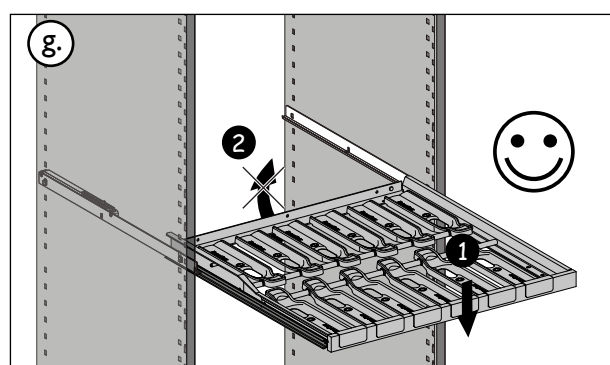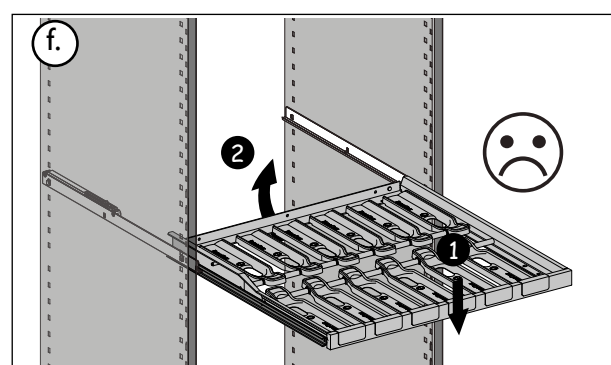


**N.B. :** in order to prevent the shelf from tipping over, ensure that the studs on each side of the shelf are pushed all the way into the holes, before pulling out the shelf.

## 5/ LAYOUT – STORAGE




**Please note:** To configure your cabinet to store magnums (see p.117), place the runners in the notches marked with the shape opposite.

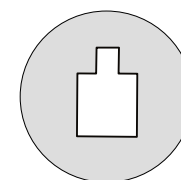


### II. Assembling and using the shelf labels

The epoxy-coated steel shelf labels allow you to identify your bottles and find them easily. White marker pen supplied in the "accessories" box (erasable).

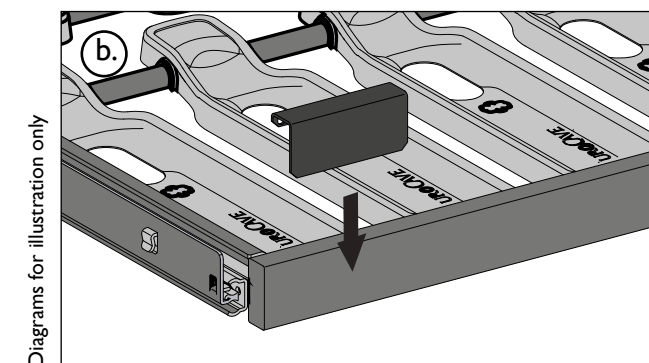

Diagrams for illustration only

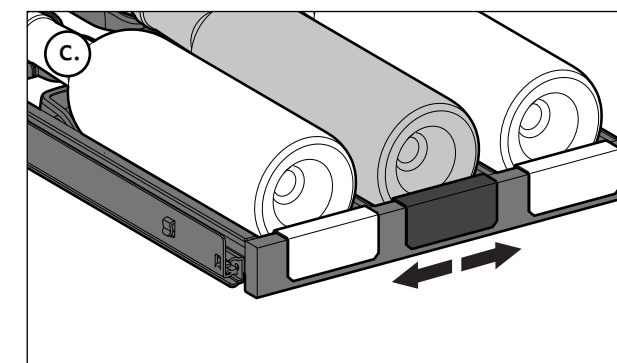

## 6/ USING YOUR WINE CABINET FOR THE FIRST TIME

### I. Connecting and starting up

After waiting 48 hours, plug in your wine cabinet.

To switch on, press and hold down the  button for 5 seconds.




Have your socket checked (presence of correct sized fuses and 30 mA circuit breaker). Do not plug several cabinets into a multi-socket adaptor.

### II. Description



The tactile keys are very sensitive. There is no need to apply force, a light touch is sufficient to register the command. Remember to remove your finger from the control between each press.

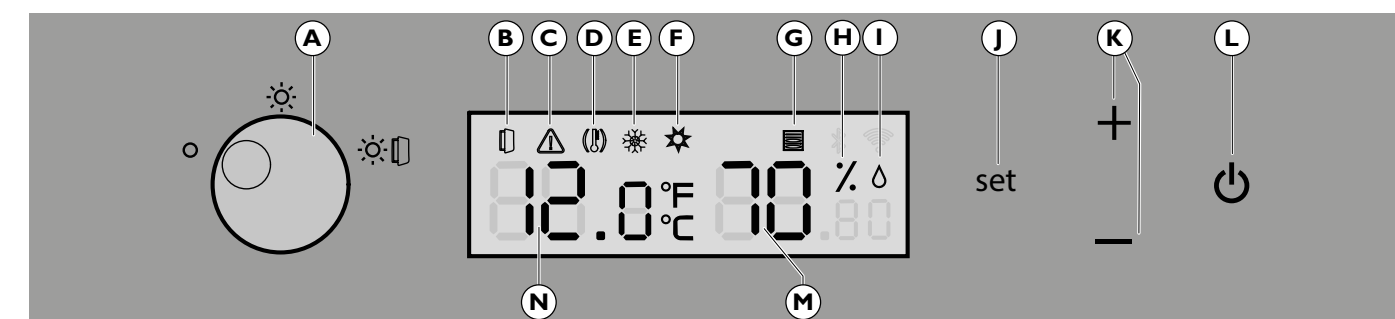

- A** Lighting mode adjustment button (3 modes)
- B** Open door indicator
- C** Warning light
- D** Temperature alarm
- E** Compressor status light
- F** Heater status light
- G** Charcoal filter alarm

- H** High humidity level alarm (if flashing)
- I** Low humidity level alarm (filling humidity tray)
- J** Confirmation and settings access key
- K** Setting and selection keys
- L** On/off/standby key
- M** Relative humidity level display (cannot be set)
- N** Temperature display (cannot be set)





## 6/ USING YOUR WINE CABINET FOR THE FIRST TIME



**N.B.:** to operate correctly, your cabinet must be placed in a room with a temperature of 0 - 35°C/ 32 - 95°F.

### III. Choice of temperature setting unit (°C/°F)



1 Press and hold down the **SET** key for approximately 2 seconds.




3 Press the **SET** button to confirm.



5 Press the **SET**.



2 Press the **+** or **-** key to choose the display "Unit".

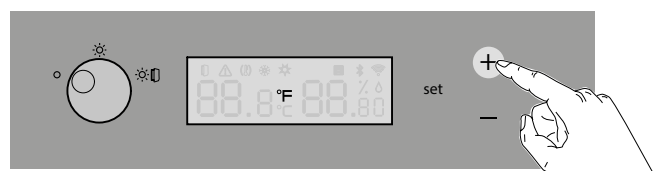

4 Choose the setting unit (°C or °F) with the **+** or **-** keys.

### IV. Setting the lighting mode



**N.B.:** replacement of the LEDs on the control panel and the shelves must only be carried out by a qualified electrician.

At any time you can choose the lighting you require using the lighting mode adjustment button.

You have 3 setting options for lighting:

- Permanent lighting.
- Lighting comes on when the door opens (it is off when the cabinet door is closed).
- Lighting disabled.



**Precautions to observe:** bright light, never look directly into the beam of the LED.

### V. Setting the lighting intensity




1 Press and hold down for approximately 2 secs the **SET** key.




2 Press the **+** or **-** key to choose the "Light" display.




## 6/ USING YOUR WINE CABINET FOR THE FIRST TIME

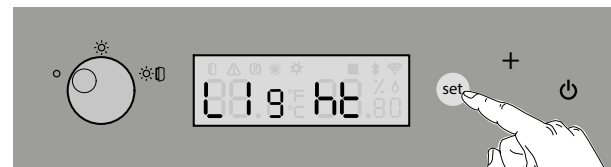

3 Press the **SET** button to confirm.

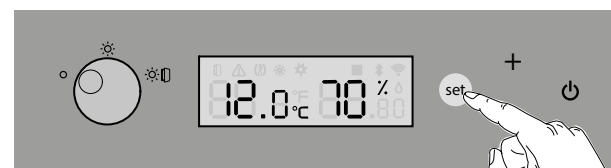

5 Press the **SET**.

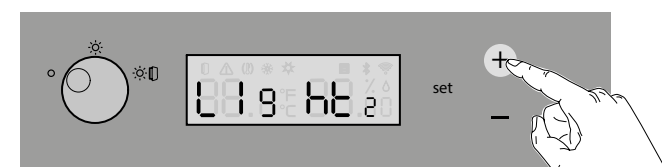

4 Set the lighting intensity with the **+** or **-** keys.



In a menu, if you do not touch any keys for 30 seconds, the display automatically returns to the main screen.

### VI. Charcoal filter

#### A. Resetting the charcoal filter meter




1 Press and hold down for approximately 2 seconds the **SET** key.




3 Press the **SET** button to confirm.



5 Press the **SET** button to confirm.

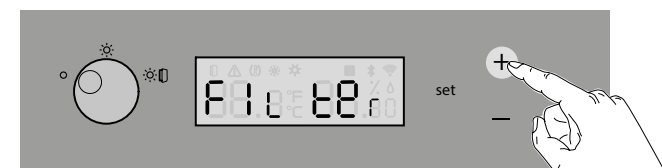

2 Press the **+** or **-** key to choose the "Filter" display.

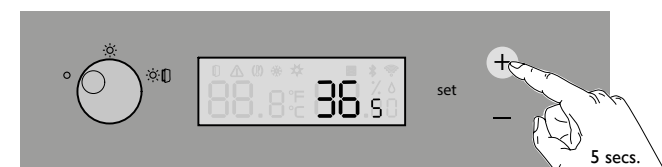


4 Press and hold down for approximately 5 seconds the **+** key to reset the meter to 365 days.



You can consult the meter at any time by repeating steps 1, 2, 3 then pressing the **SET** or **power** key to return to the main menu.

#### B. Changing the charcoal filter

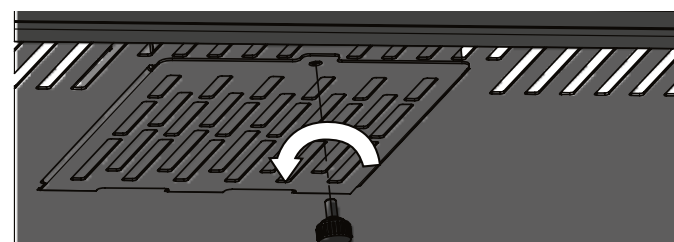


1 Unscrew the button of the charcoal filter hatch, under the control panel.




2 The hatch will open.




## 6/ USING YOUR WINE CABINET FOR THE FIRST TIME

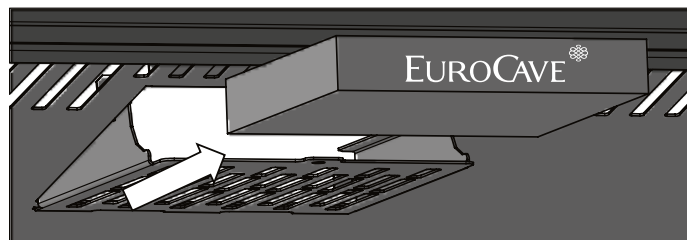

3 Remove the existing charcoal filter.

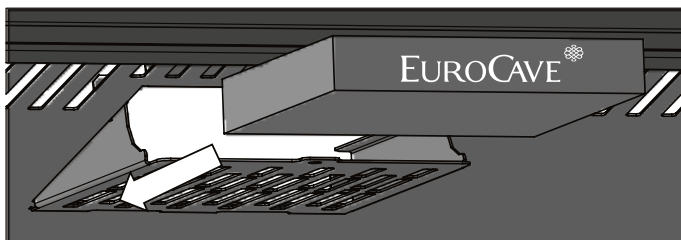

4 Insert the EuroCave charcoal filter (with the EuroCave label facing you), taking care to first remove the protective plastic.

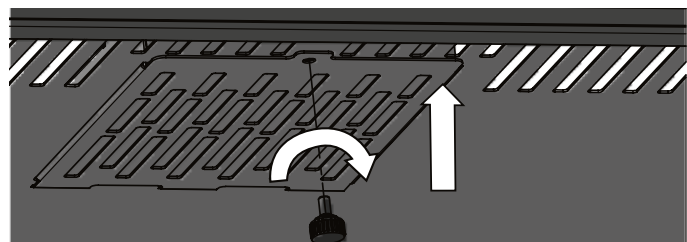


5 Push the hatch upwards and screw the button back on.



**N.B.:** Only use genuine EuroCave parts.




## VII. Disabling the audible warning signal of the alarms



When your appliance has a fault, an audible warning may accompany the visual warning. To turn off this alarm this audible warning, simply briefly press the  key.



Disabling the audible warning signal of the alarms does not disable the visual warnings.

The following alarms have an audible warning signal that can be disabled:

- Temperature alarm 
- Low humidity level alarm  (after being below 50% for 60 days)
- High humidity level alarm  (after being above 90% for one week)






- Temperature sensor fault alarm  + « ErI »
- “Erh” humidity sensor fault alarm
- Open door alarm  (after 15 minutes)

## VIII. Placing the screen on standby

To place the screen on standby, briefly press the  key. Repeat the process to exit standby mode. The cabinet remains in operation when the screen is in standby mode.



**It is not possible to activate standby mode whilst the following warning lights are on:**

- Temperature alarm 
- Low humidity level alarm 
- High humidity level alarm 
- Temperature sensor fault alarm  + « ErI »
- “Erh” humidity sensor fault alarm
- Open door alarm 



## 7/ EVERYDAY MAINTENANCE



Your EuroCave wine cabinet is a tried and tested appliance.

### Maintenance procedures approximately once a year

- Unplug and unload the appliance.
- Remove any particles that could block the drain pipe located inside the cabinet, on the ledge at the bottom.
- Clean the inside of the compartments with water and a gentle cleaning product.
- Rinse thoroughly. Dry with the EuroCave microfibre cloth provided.
- Glass sections must be polished with the EuroCave non-abrasive microfibre cloth provided, after first cleaning with a glass cleaning product.
- Replace the active charcoal filter housed in its hatch under the control panel (see chapter 6, IV). Remove the charcoal filter manually. It is available from your usual retailer. It must be replaced by a manufacturer's part.
- Check that the door seal is in good condition. It is often necessary to clean the seal. Cleaning with unsuitable products can cause premature wear of the seal. You should therefore observe certain rules: Whenever the seal is cleaned, it must be rinsed with clean water. no traces of cleaning product must be left on the seal. EuroCave recommends that you only use a mild soapy solution. If cleaning with this type of

solution proves insufficient, it is possible to occasionally use an ethanol-based solution, but with a concentration of less than 10 %, and taking care to rinse the seal with clean water.














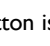
- To remove words written with the white marker pen on our bottle identification labels, use a damp cloth.
- Use a damp cloth to clean the fronts of the shelves.
- Use the EuroCave microfibre cloth to clean glass or plastic sections of your cabinet.
- Clean the humidity control tray every 1 - 2 years depending on the quality of the water used. Take the tray out of its slot. Unscrew the upper panel and clean the different elements with soapy water. Rinse thoroughly, screw the upper panel back on and fill the tray (see chapter 4). Put the tray back into the slot provided in the cabinet.
- Clean the two metal strips used as an electrical contact for lighting the shelves with a damp cloth.
- If dust has settled on the ventilation openings on the back of the wine cabinet, simply remove it with a vacuum cleaner.



Never use a cleaning product containing acetone, petrol or alcohol, white spirit or synthetic thinner, which could damage the front.




## 8/ OPERATING FAULTS

| Possible incidents  | Causes   | Corrective action  |
|---|--|--|
| The pictogram  is displayed and the alarm is ringing. The  button is red.<br>(Temperature alarm)  | The temperature has been 4°C higher or lower than the selected temperature for at least 24hrs. | Check that the door is closed.<br>Check the condition of the door seal.<br>If you have loaded your cabinet with a large amount of bottles in the past few hours, wait a while then check again.<br>If the alarm continues, contact your EuroCave retailer. |
| The  pictogram is still displayed even though the previous corrective action has been taken. The  button is red.<br>(Temperature alarm) | Operating fault  | Unplug the cabinet and contact your EuroCave retailer.   |
| The  pictogram is displayed. The  button is red.<br>(Low humidity level alarm)  | The humidity level has been below 50% for 96hrs.   | Fill the humidity control tray (see chapter 4).<br>If the alarm continues, contact your EuroCave retailer.   |
| The  pictogram is displayed, the  button is red and the alarm is ringing.<br>(Low humidity level alarm)                                 | The humidity level has been below 50% for 60 days.   | Fill the humidity control tray (see chapter 4).<br>If the alarm continues, contact your EuroCave retailer.   |
| The  pictogram is flashing. The  button is red.<br>(High humidity level alarm)  | The humidity level has been above 90% for 72hrs.   | Unplug your appliance then plug it back in again.<br>If the problem continues, contact your EuroCave retailer/customer services.   |
| The  pictogram is flashing the  button is red and the alarm is ringing.<br>(High humidity level alarm)                                  | The humidity level has been higher than 90% for a week.  | Unplug your appliance then plug it back in again.<br>If the problem continues, contact your EuroCave retailer/customer services.   |
| The  pictogram and ErI are displayed and the alarm is ringing.<br>The  button is red.<br>(Temperature sensor fault alarm)               | Temperature sensor fault alarm   | Unplug your appliance then plug it back in again.<br>If the problem continues, contact your EuroCave retailer/customer services.   |




## I0/ V-ROYALE-L

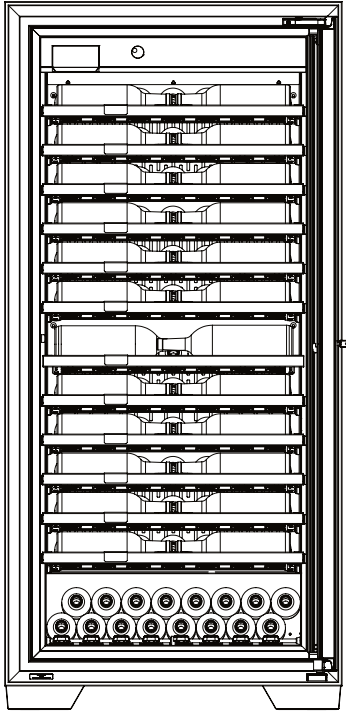

124 bottles

Sliding

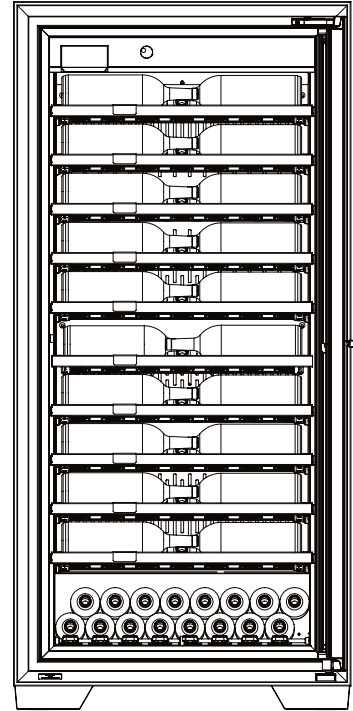

106 bottles

Sliding

\*The cabinet capacities are calculated in factory configuration using traditional Bordeaux bottles.

\*\* With traditional Bordeaux and magnum layout.

## NOTES